



## 6 Inch Half Round Gutter

### Step 4

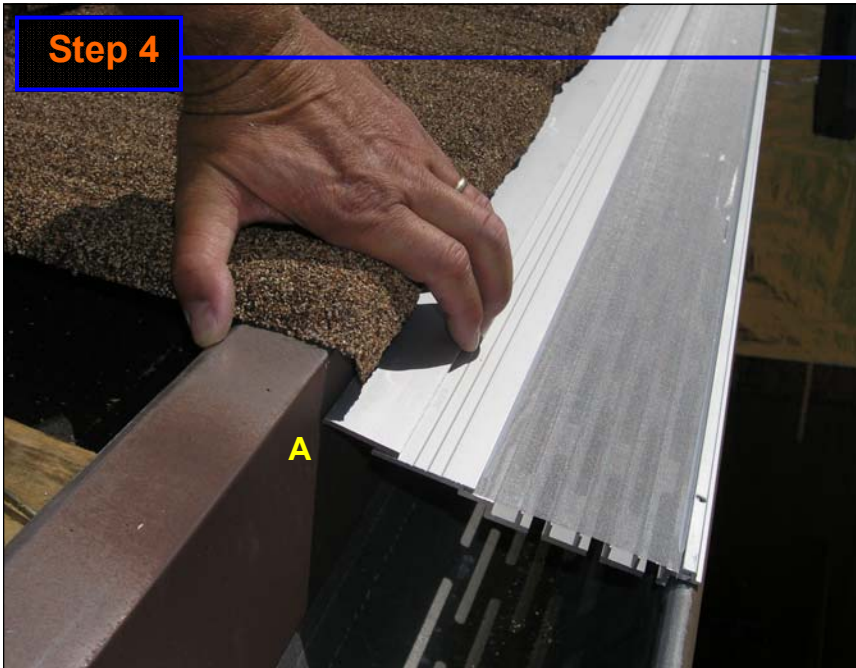

A

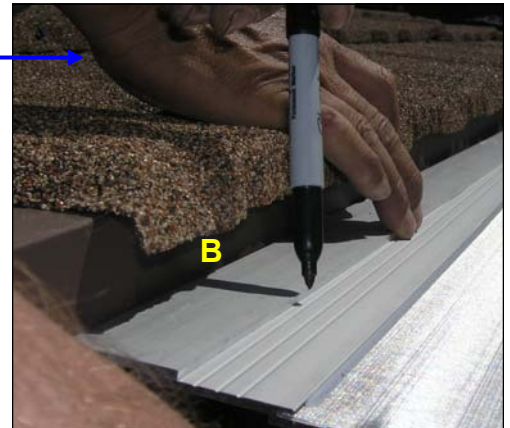


B

Figure A: The one inch strip fits neatly on top of Gutterglove covering the gap between the fascia board.

Figure B: Mark the point identifying the distance where the strip will be fastened to on Gutterglove.

### Step 5

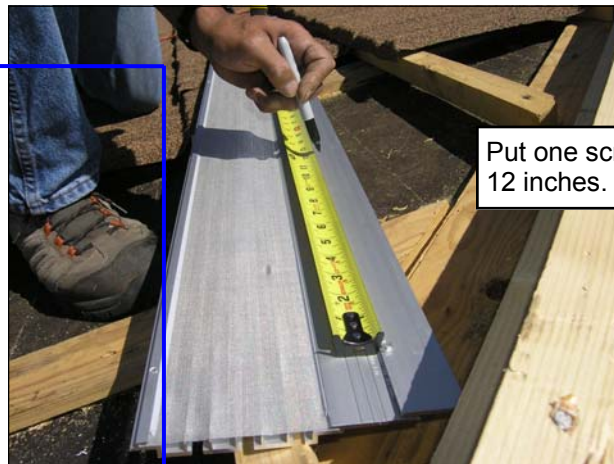

Put one screw every 12 inches.

Screw down the strip to the back of Gutterglove.  
You may have to pre-drill first.





## ***6 Inch Half Round Gutter***



The final step is to install Gutterglove. There are no screws or support brackets holding up the back because Gutterglove rests on the fascia board. Because the front is screwed down tightly to the front lip of the gutter, the back cannot come up.

Gutterglove has been successfully installed on a 6 inch half round gutter.

